

BIBO

BIBO bar
user manual



Maximize your BIBO experience

Welcome!

Congratulations on your new BIBO bar. You are just moments away from enjoying endless pure, boiling and ice-cold water, at the touch of a button.

As we want you to get the best from your BIBO bar, we ask that you read through this manual before getting things started.

This manual is your go-to-guide for your BIBO bar and includes practical advice and technical information to answer any questions you may have. However please remember that our team is just an email or phone call away should you have any further queries.

Visit www.bibo.co.za/contact, email help@bibo.co.za or call [**0800 00 BIBO \(2426\)**](tel:0800 00 BIBO (2426)).

So let's clink glasses and say 'cheers!' to many happy and healthy drinks with BIBO.

PLEASE NOTE

The pictures and diagrams in this manual are for reference only, please refer to your BIBO bar.

We reserve the right to make corrections or changes to the information provided in this manual without prior notice being given. The products, functions, structures and designs described in this manual have been patented by our company and are thus protected by the UK, EU, South Africa and Australia patent offices.

Version number 190901

© Copyright BIBO 2019, All Rights Reserved





Contents



[MEET YOUR BIBO bar](#)

p. 4

BIBO bar overview
BIBO bar's touch screen interface



[INSTALLING YOUR BIBO bar](#)

p. 6

Before getting started
Step-by-step guide to self installation



[USING YOUR BIBO bar](#)

p. 11

Menu options and personal settings
Dispensing water



[MAINTAINING YOUR BIBO bar](#)

p. 22

Replacing your BIBO bar maxi filter
Replacing your BIBO bar zapper
Cleaning your BIBO bar



[TECHNICAL INFORMATION](#)

p. 26

Product specifications
Safety notes



[TROUBLESHOOTING](#)

p. 28



[WARRANTY](#)



p. 29

Meet your BIBO bar

BIBO OVERVIEW

1. Touch screen interface
2. 2.8" TFT LCD screen
3. Water outlets
4. Front panel
5. Removable Drip Tray



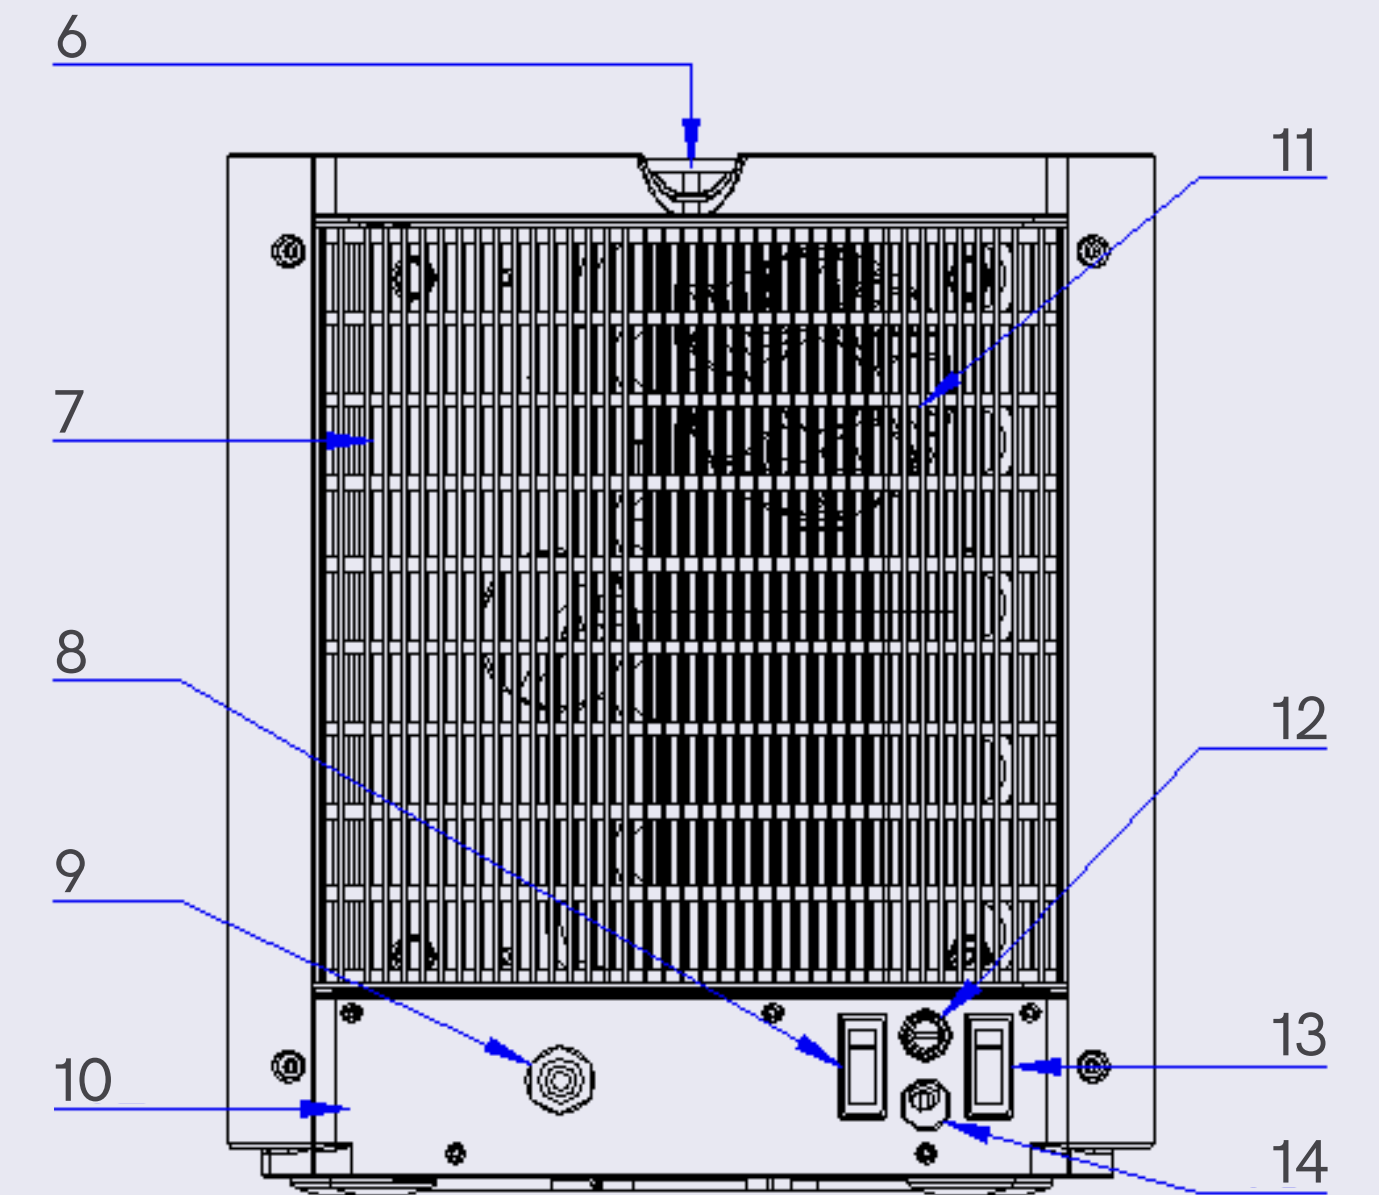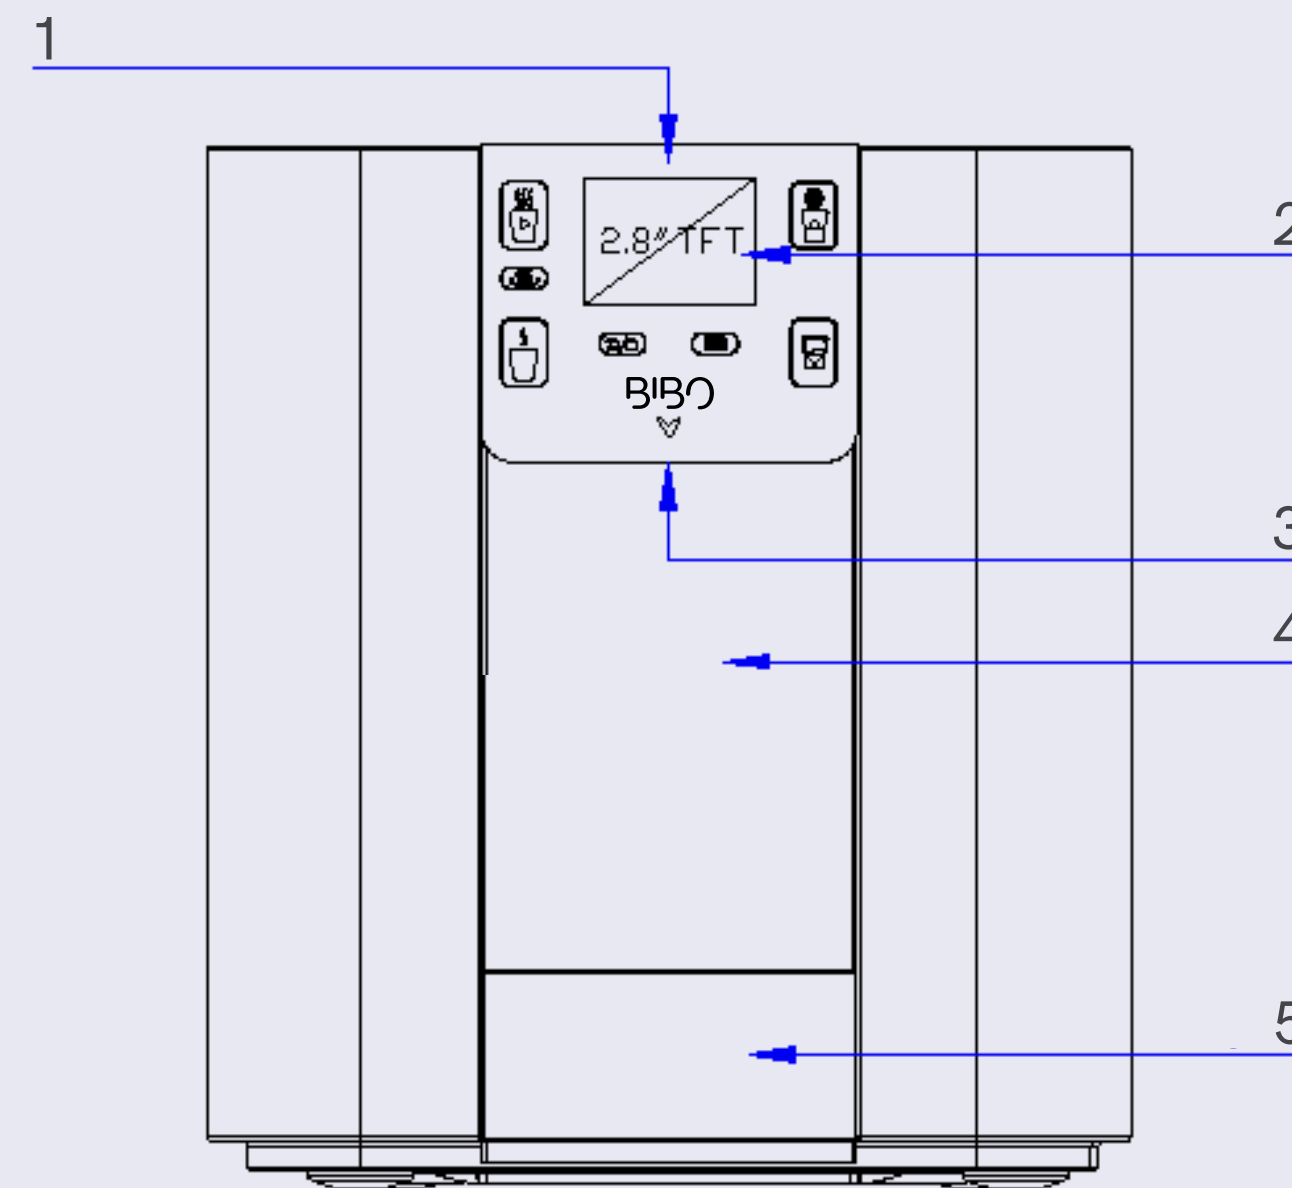











-
6. Lid
 7. Refrigeration condenser
 8. Hot tank switch
 9. Water inlet
 10. Rear panel
 11. Cooling fan
 12. Mains fuse
 13. Power switch
 14. Mains power cable



Meet your BIBO bar

 THE TOUCH SCREEN INTERFACE



- | | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1

Zapper status icon | 2

Child lock status icon | 3
01-01-2019
Calendar
(Day - Month - Year) | 4
08:00
Clock
(24 hour) | 5

Automatic on/off icon |
| 6

Power saving mode icon | 7

Boiling water button
(also acts as a navigation button in the menu mode) | 8

Super boil button | 9

Ambient (mixed hot & cold) water button | 10

Chilled water button
(also acts as a navigation button in the menu mode) |
| 11

Measured cup button
(also acts as a navigation button in the menu mode) | 12

Lock button (also acts as the "return" button in menu mode) | 13

Heating & boiling water temperature bar | 14

Chilling & cold water temperature bar | 15

Menu button (also acts as the save button in menu mode) |
| | | | | 16

Water outlet indicator light (red for hot, blue for cold) |

Please note that your BIBO bar's red Boiling Water Button (7), blue Chilled Water Button (10) and white Measured Cup Button (11) all have arrows inside. This is because they act as scroll buttons when navigating through the BIBO bar menu. Similarly, the Menu Button (15) and Lock Button (12) act as a confirmation and back buttons respectively when in menu mode.

Installing your BIBO bar

BEFORE GETTING STARTED

Our experienced installation teams are here to make sure that your BIBO bar is correctly installed. If you are installing your own BIBO bar, then please read through all the instructions carefully, familiarising yourself with and understanding all the steps completely before beginning.

If you are at all uncertain about any of the steps, please call us on [0800 00 BIBO \(2426\)](tel:080000BIBO) and ask to speak to one of our experienced technical team members.

On average, a BIBO bar installation should take between one hour to an hour and a half.

CAUTIONARY NOTES

Your BIBO bar weighs 17kg, so please take care when lifting it from its box.

The hot tank switch is clearly labeled at the back of your BIBO bar (See [page 4](#), number 8).


Please ensure that you do NOT turn the hot tank switch on until the BIBO bar has filled itself with water.

Switching the hot tank switch on before your BIBO bar has filled with water will require a call out from our technical team (this comes with a fee).

See [page 9](#), point i, for more details on this.

YOUR BIBO BAR TOOLKIT

Your BIBO bar comes with a self installation kit consisting of a 3m length of 6mm white water supply pipe (1), a BIBO ½" "T" connector with a ball valve (2), an easy to fit right angled stem fitting (3) and a zipper key (4).

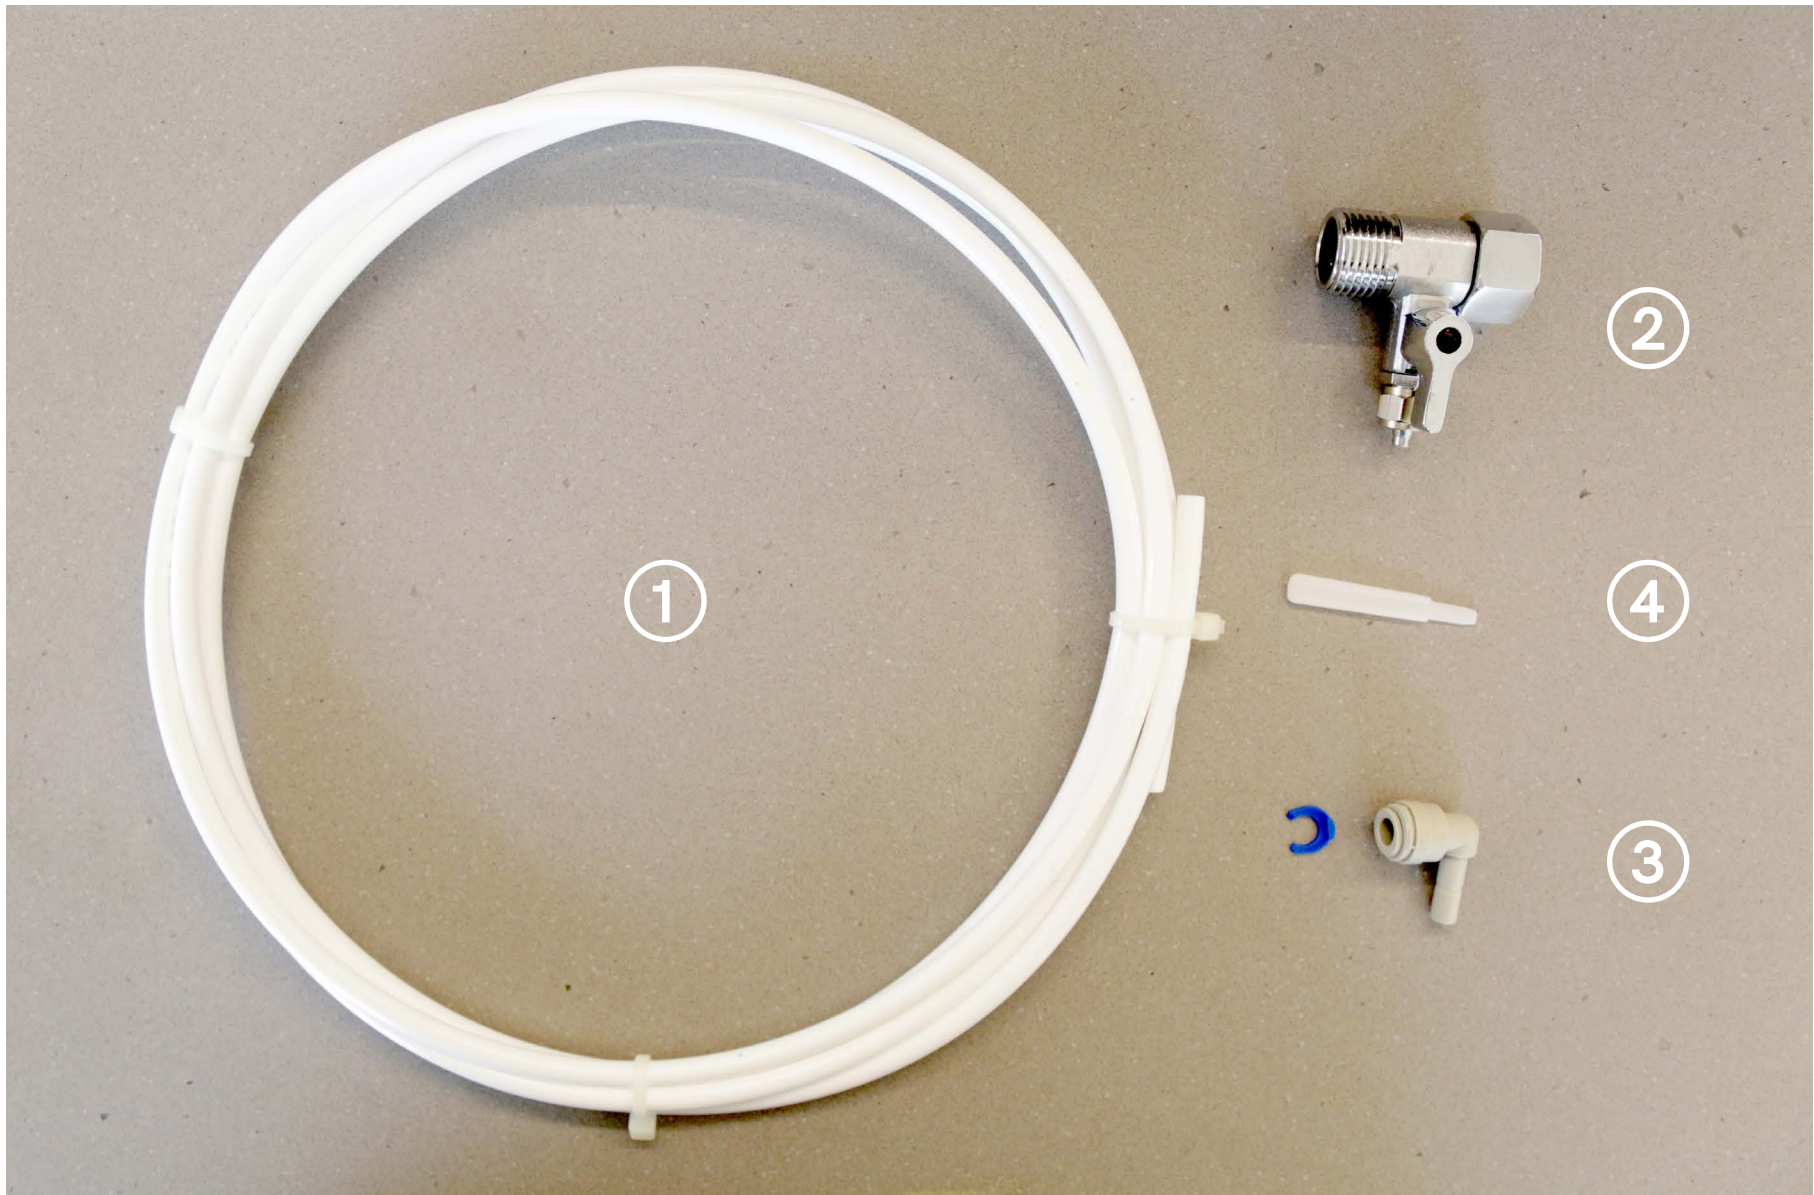

Printable Guide

Installing your BIBO bar

BEFORE GETTING STARTED

WHERE TO PLACE YOUR BIBO bar

The BIBO bar often takes centre stage in the kitchen and fast becomes the most loved and used appliance. It is for this reason that the choice of where to place and display your BIBO bar needs to be one that offers both convenience and style.


However a few considerations need to be taken into account before choosing where to place your BIBO bar.



Your BIBO bar needs to be installed in a cool, dry place and kept away from any heat source.



There will need to be a suitable mains cold water supply nearby (more often than not, this will be located under your kitchen sink or behind your dishwasher and/or washing machine).

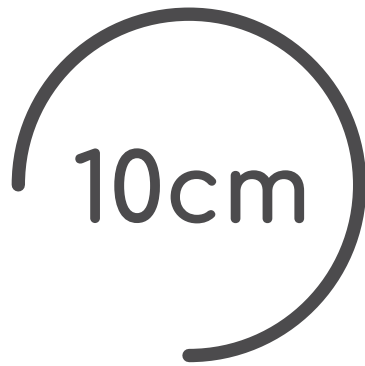

Your BIBO bar needs to be well ventilated. In order to ensure this, please keep the rear of the BIBO bar a minimum of 10cm away from the wall. Don't install your BIBO bar in a cupboard or closed off space.



You will need an electrical power supply. Your BIBO bar comes with a standard 3-pin (16amp) plug.

WATER SUPPLY

The water pressure should be between 4bar (58psi) and 6bar (87psi).

Before beginning the installation, you will need to identify a mains cold water supply nearby. To identify the cold water supply, turn on the hot tap and wait for the flowing water to get hot. Feel both pipes under the sink. The one hot to the touch is the hot water supply. **WARNING:** the pipe can get extremely hot and cause burns. Please take care!

The mains cold water supply will need to be turned off before beginning the installation. Often there is an angle stop valve which will enable you to isolate the cold water pipe. If not, then it will be necessary to turn off the mains water supply to your home/

office. Please identify where the tap/isolation valve is located before beginning.

Ensure that your water feed/supply is flushed out thoroughly into a bucket until clear water is visible with no sediment or dirt particles in the water. This is to ensure your BIBO bar does not block up. Be sure to do so especially in newly renovated homes and offices.

Installing your BIBO bar

STEP BY STEP GUIDE FOR SELF-INSTALLATION

1. PREPARATIONS

- a.** Decide where you will place your BIBO bar.
- b.** Carefully remove your BIBO bar from its packaging and place it in its preferred spot on the work surface.
- c.** Remove the plastic bag and protective covering from the cable and plug.
- d.** Remove the drip tray wrapping and take out the zapper 'key' from inside the drip tray (keep this somewhere safe - you'll need it down the line when replacing your zapper).
- e.** Remove the protective cover from the touch screen.

2. WATER SUPPLY CONNECTION

- a.** Isolate the mains water supply by either turning off the

angle stop valve or turning off the mains water supply to your home/office.

- b.** Drain as much water as possible from the pipe connected to the angle stop valve before disconnecting it. It's useful to have a cloth close by to dry up any spills.


- c.** Install the BIBO ½" "T" connector into the mains water supply pipe. Make sure that the BIBO ½" "T" connector is in the closed position. (Picture 1)

- d.** Connect the 6mm white water supply pipe to the BIBO ½" "T" connector and run it to the BIBO bar (Picture 2). You'll need to flush the water feed out completely into a bucket, until the water is clear and free from sediments or dirt particles.

- e.** Remove the locking clip from the inlet water fitting (blue or white in colour) at the back of

your BIBO bar. (Picture 3)

- f.** Remove the blanking plug from the inlet water fitting, by depressing the ring. While depressing the ring, pull blanking plug out. (Picture 4)
- g.** Insert the right angled stem elbow (provided with your BIBO bar) into the water inlet. (Picture 5)
- h.** Refit the locking clip. (Picture 6)
- i.** Push the 6mm white water supply pipe into the elbow at the back of your BIBO bar. (Picture 7)
- j.** Open the ball valve on the BIBO ½" "T" connector (Picture 1)
- k.** Turn on the angle stop valve or your mains water supply.

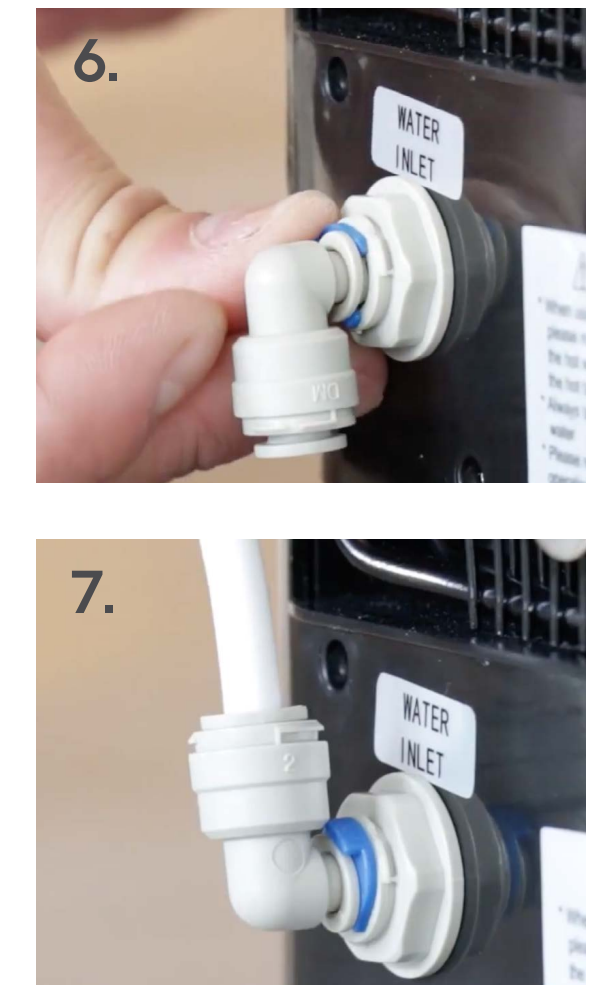

Installing your BIBO bar

STEP BY STEP GUIDE FOR SELF-INSTALLATION

3. SETTING UP YOUR BIBO bar

a. Plug the BIBO bar's plug into a 3 pin socket.

b. Ensure that the hot tank switch (see [page 4](#), number 8) is off at the back of your BIBO bar.


c. Turn on the power switch (see [page 4](#), number 13) at the back of your BIBO bar. Please take caution to not confuse this with the hot tank switch.

d. Once turned on, your BIBO bar will display the BIBO logo (Image i) followed by a zapper test (Image ii); this means that your BIBO bar is operating correctly.


e. Now you should see the home screen. There should be a red bar on the left of the screen and a blue bar on the right of the screen (Image iii).



i

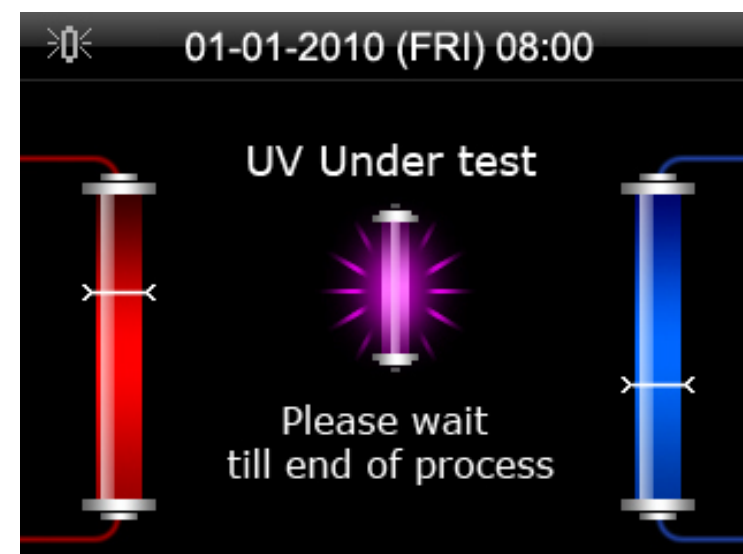

ii

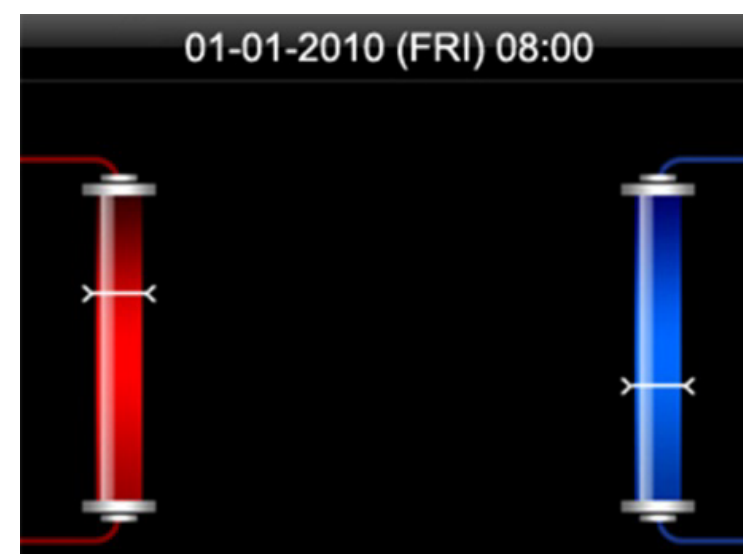

iii


f. Once you see the home screen, turn on the hot tank switch at the back of the BIBO bar (see [page 4](#), number 8).

g. A message will appear on your screen to fill the hot water tank (Image iv).



iv

h. Place a mug under the water outlets. (See [page 4](#), number 3)

i. Push the  button ONLY ONCE to start the boiling filling process.

DO NOT PUSH ANY BUTTON INCLUDING THE RED CUP BUTTON UNTIL THIS PROCESS HAS BEEN COMPLETED.

(If by mistake you did push a button before seeing water flow from the nozzle switch off the heating switch immediately and start from step f again). You will know that the boiling filling process has been completed

when water starts to flow from the outlet nozzle situated under the screen. This usually takes about 1 minute from pushing the red cup button to water flow from the nozzle.

j. Once water starts flowing from the nozzle push any button to end the boiling filling setup process.

k. The hot tank will begin to heat up and the hot water temperature bar icon will be active on the screen as streaming upwards.




Installing your BIBO bar

STEP BY STEP GUIDE FOR SELF-INSTALLATION

3. SETTING UP YOUR BIBO bar CONTINUED

When first used, the hot tank will take approximately 5 minutes to get up to the maximum temperature.

l. Similarly, fill the cold water tank by dispensing water from the cold water outlet (Image v).

To do this, touch  and wait until water starts dispensing. Then touch any button to stop the water flow.


m. It is recommended that you drain 1,5 litres from the cold tank and 1,5 litres from the hot tank before drinking from your BIBO bar. This is done by simply dispensing water as per the instructions on [page 20](#) for chilled and boiling hot water. Note: The BIBO bar will automatically stop dispensing

once 1,5 litres has been drained.

n. Your installation is now complete and your BIBO bar will be ready to be used and enjoyed (Image vi).



v

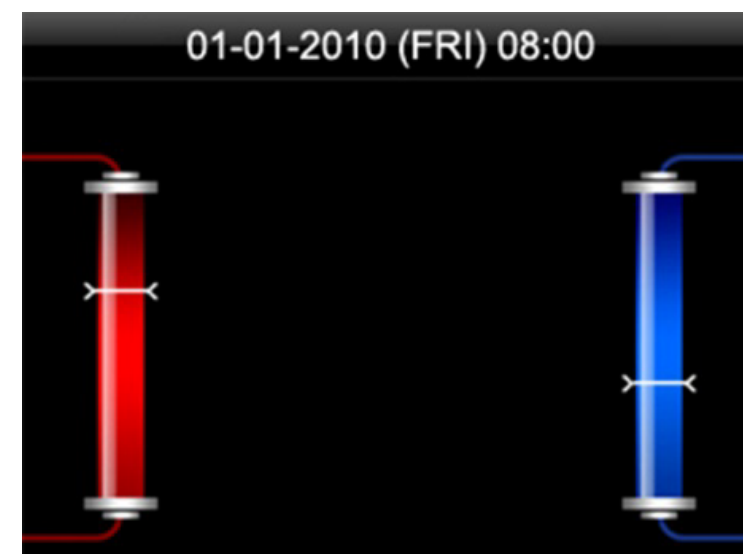

vi



Using your BIBO bar


MENU OPTIONS AND PERSONAL SETTING



The menu is the place to customise your BIBO bar according to your personal preferences, making it the perfect fit for your family, home and/or office.

In the menu you will be able to control the temperature settings, water dispensing quantity settings, time and date settings, language settings, energy saving settings, safety settings and ringtone settings.



Additionally the menu contains your MAXI filter and zapper settings. There is also an option to restore your BIBO bar to its original factory settings (but please don't ever restore your BIBO bar without consulting our BIBO technical team first).



To enter the menu, touch  and follow the on-screen prompts. Navigating the menu settings is easy.

To choose and enter into a particular setting touch  (you will notice a right arrow in the hot cup) until the correct setting is selected (this will be highlighted with a bronze shade) and then touch  again to select the setting.

Touching  will take you back to the previous screen.

To adjust certain settings, touch  (you will notice an up arrow in the chilled water cup) and/or  (you will notice a down arrow in the white cup) according to the on-screen prompts. If no selection is made within 10 seconds, your BIBO bar will default back to the home screen.



Using your BIBO bar

MENU OPTIONS AND PERSONAL SETTING


WATER TEMPERATURE SETTING



Your BIBO bar allows you to set your preferred water temperatures for boiling, hot, cold and ambient dispensing.


To adjust your temperature settings:



- 1. Touch  on your BIBO bar’s screen. You will see the temperature (Temp) setting selected.
- 2. Touch  again to select and enter into the Temp settings. You will see the following icons at the top of your screen Super boil, boiling, chilled and ambient/mix.




3. Touch  to navigate between the temperature settings (Image i - iv).


4. Touch  to increase the temperature and the  to decrease the temperature.

5. Once you are happy with the temperature you have chosen, touch  to save the temperature setting. Save after any change.


6. To return to the menu touch  and to return to the home screen touch  again.

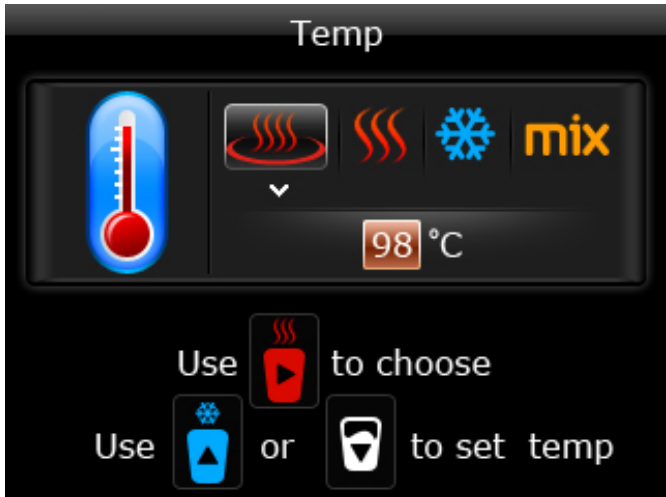

i

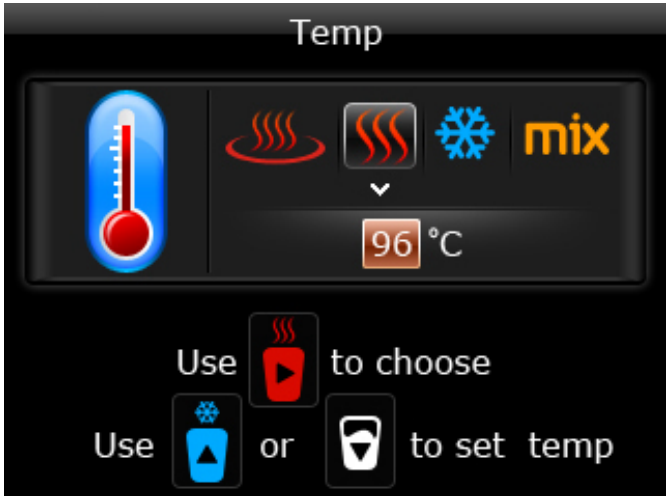

ii

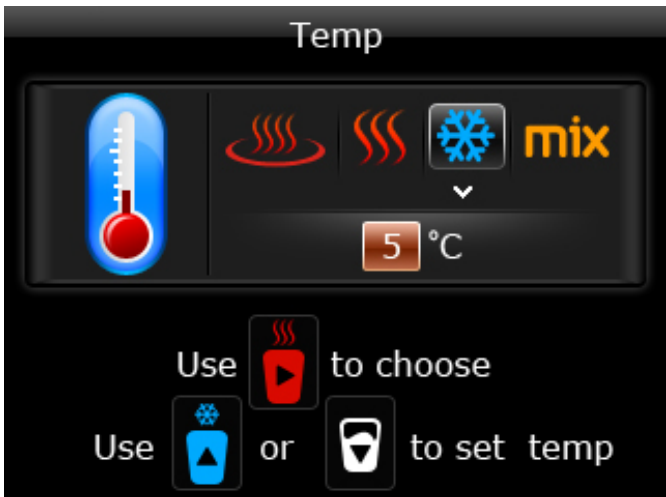

iii



iv

TEMPERATURE TIP

When setting your boiling water temperature remember that the higher the altitude of your location, the lower the degree at which water reaches boiling point.

For example, if you’re by the coast, your boiling water will be much hotter than if you up in the mountains.

In order to make sure that your BIBO bar dispenses boiling water and does not turn the water to steam, select a boiling temperature according to the table to the right.

If you’re still not sure what is the best temperature for your location, please reach us on [0800 00 BIBO\(2426\)](tel:080000BIBO) or help@bibo.co.za

City	Elevation (m)	Temp (C)
Bloemfontein	1400	94
Cape Town	0	98
Durban	0	98
East London	0	98
Johannesburg	1753	93
Kimberly	1120	95
Nelspruit	676	97
Paarl	120	98
Pietermaritzburg	600	97
Polokwane	1600	93
Port Elizabeth	0	98
Potchefstroom	1340	94
Pretoria	1339	94
Uppington	838	96
Welkom	1365	94




Using your BIBO bar

MENU OPTIONS AND PERSONAL SETTING

WATER QUANTITY SETTING

Your BIBO bar allows you to preset your cup size for boiling, chilled and ambient (mix) water. Setting this up will allow your BIBO bar to automatically dispense the right amount of water for your cup. Please get your favourite glass and mug ready to set the water quantity.

To enter into your water quantity settings:

1. Touch  on your BIBO bar's screen. And navigate to the quantity (QTY) setting by touching  once. You will then see the QTY setting selected (Image i).
2. Touch  again to select and enter into the QTY settings.



3. You will see the following icons at the top of your screen boiling, chilled and ambient/mix (Image ii).

4. Touch  to navigate between the quantity settings.


5. To set the quantity for boiling hot water dispensing:

- Place your preferred mug or thermal cup on the drip tray below the water outlet.



- Navigate to the boiling water settings using .




You will see a default time set up of 10 seconds. This is a time based quantity setting, which means that the water will dispense for the duration of that time.

- To customise the time, touch  to start dispensing boiling hot water. (Please take caution

that boiling water will be dispensed immediately once touched.)

- Once your preferred amount of boiling water has been dispensed into your mug or thermal cup, touch  to stop the water from dispensing. You will notice your BIBO bar counting up the seconds measuring the amount of time it takes to fill your mug or thermal cup.
- Touch  to save the setting.

6. To set the quantity for chilled water dispensing:

- Place your preferred cup on the drip tray below the water outlet.
- Navigate to the chilled water setting using . You will see a default time set up of 10 seconds (Image iii).




This is a time based quantity setting, which means that the water will dispense for the duration of that time.




Using your BIBO bar

MENU OPTIONS AND PERSONAL SETTING



WATER QUANTITY SETTING CONTINUED









- To customise the time, touch  to start dispensing chilled water.
- Once your preferred amount of chilled water has been dispensed into your cup, touch  to stop the water from dispensing.
You will notice your BIBO bar counting up the seconds measuring the amount of time it takes to fill your cup.
- Touch  to save the setting.

7. To set the quantity for ambient/mix water dispensing:

- Navigate to the ambient/mix water setting using  (Image i).



- Touch  to increase the millilitres and the  to decrease the milliliters of your ambient water mix.

- Once you are happy with the milliliters for ambient dispensing, touch  to save the quantity setting.
 - To test the preset measured amount of ambient water, return to the home screen by touching /  two times, place a cup under the water outlets and then touch .
8. To return to the menu touch /  and to return to the home screen touch /  again.

DID YOU KNOW that changes in location, season, temperature, atmosphere and municipal water pressure have an impact on the flow rate of water and the way water is dispensed from your BIBO bar? It is for this reason that the preset measure is an approximate amount. Please do not leave dispensing water unattended.



Using your BIBO bar


MENU OPTIONS AND PERSONAL SETTING


TIME AND DATE SETTINGS


Your BIBO bar displays the time and date. Setting the correct time is needed to ensure that your BIBO bar’s energy saving features can function correctly.


To adjust your time settings:

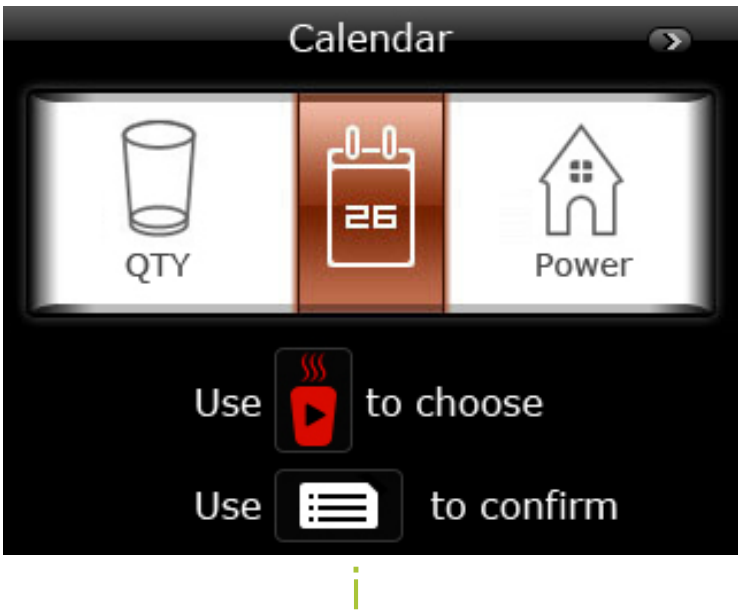

1. Touch  on your BIBO bar’s screen. And navigate to the Calendar setting by touching  two times. You will then see the Calendar setting selected (Image i).



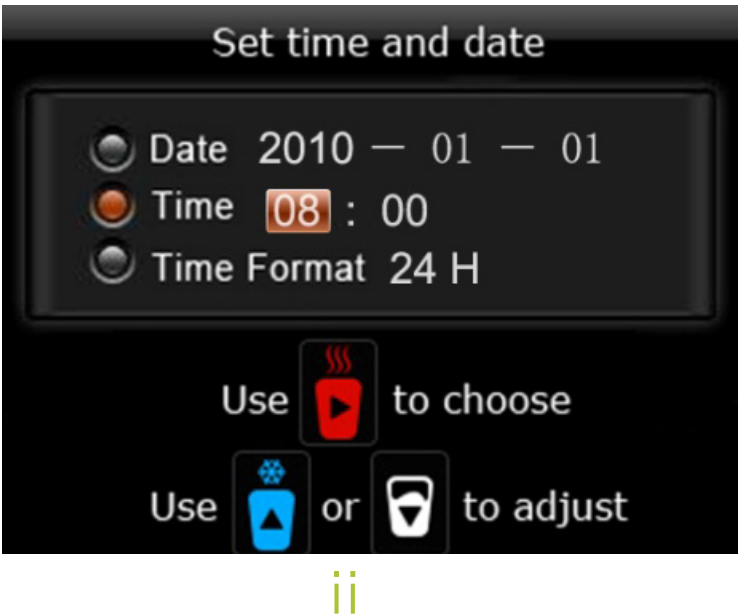

2. Touch  again to select and enter into the Calendar settings. You will see date, time and time format settings (Image ii)







3. Use  to navigate between the date and time settings.



4. To change the date, touch the  to advance the year and  to regress the year. Once the

correct year is set, use  to navigate to the month and day, following the same routine.

5. Similarly, to change the time, navigate to the time setting using  and adjust the hour and minute settings. Furthermore you can select your preferred time format and choose between a 12-hour or 24-hour clock.

6. To do this, navigate to the time format setting using  and change the format using the  or .

7. Once your date and time have been set correctly, touch  to save the Calendar settings.

8. To return to the menu touch  and to return to the home screen touch  again.


Using your BIBO bar


MENU OPTIONS AND PERSONAL SETTING


POWER AND ENERGY-SAVING SETTINGS


Your BIBO bar is designed to save energy based on your usage behaviour and lifestyle. The first energy saving technique is Sleep Mode which allows your BIBO bar to go to sleep and save energy after a certain amount of time of non-use. The second energy saving setting is Power On/Off Mode, which puts your BIBO bar on standby over a preselected time and duration, enabling your BIBO bar to turn on and off at different times of the day according to when you will be using it. We highly recommend enabling both your power settings to save as much energy as possible and the environment.

To adjust your power settings:

1. Touch  on your BIBO bar's screen.
2. Navigate to the Power setting

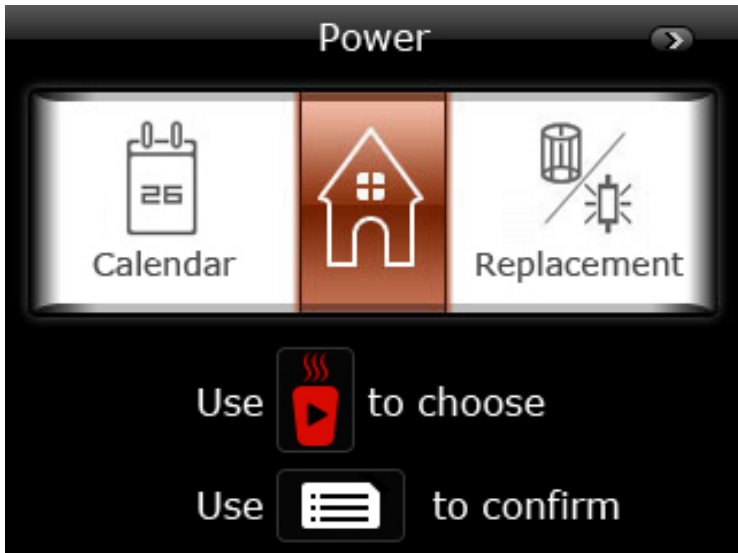

by touching  three times. You will then see the Power setting selected (Image i).










3. Touch  again to select and enter into the Power settings. You will see Sleeping and Power on/off settings (Image ii).

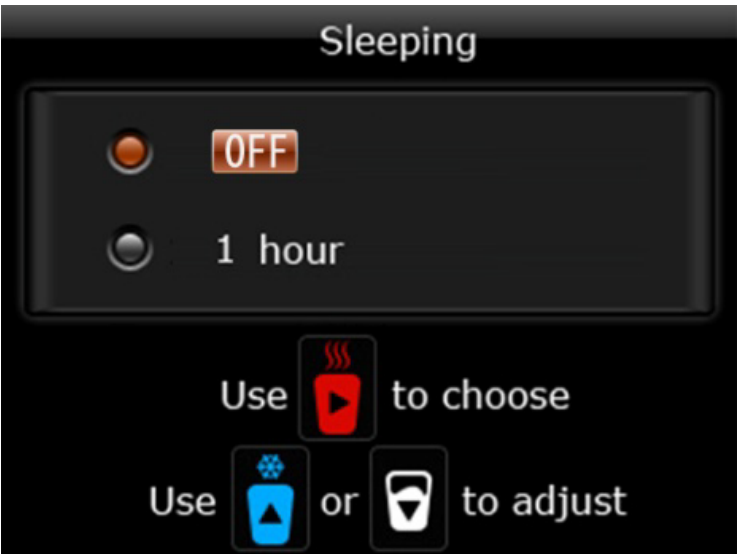



4. To set your BIBO bar's sleep mode:

- Use  to navigate to the Sleep settings (this should be selected by default).
- Touch  to enter into the Sleep settings. You will see an on/off setting and an hourly setting (Image iii).



- Use  or  to choose whether you would like your Sleep Mode on or off.
- Once you are happy with your choice, touch  to save your choice.
- Use  to navigate to the hourly setting.
- Use  and  to set the amount of inactive hours after which you would like your BIBO bar to enter into Sleep Mode. This is between 1 and 4 hours.

- Once you are happy with your choice, touch  to save.
- Touch  to return to the Power settings.

When your BIBO bar goes into Sleep Mode, it will display the following screen (Image iv).




Simply press any button to wake it up again. It can take up to a minute for your BIBO's temperature to normalise.


Using your BIBO bar


MENU OPTIONS AND PERSONAL SETTING

POWER AND ENERGY-SAVING SETTINGS

5. To set your BIBO bar's Power on/off mode:

- Use  to navigate to the Power on/off settings (Image i).

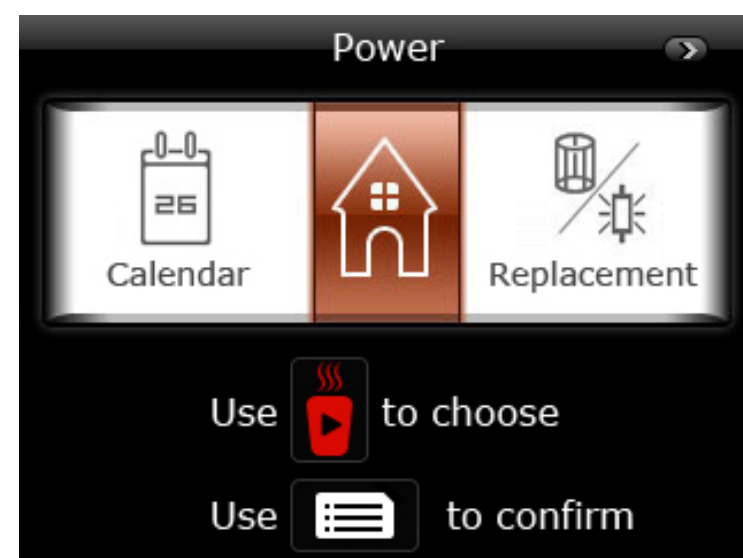


- Touch  to enter into the Power on/off settings (Image ii).







- You will see an option for three on/off times (Image iii).





- Use  to navigate between the on/off time settings.



- To set an on/off time, touch the  or .

- Once you have chosen between the on/off option, touch  to navigate to the hour setting using the  to advance the hourly time and the  to regress the hour.

- Similarly navigate to the minute setting by touching  and follow the same routine.

- To set another on/off time, touch  to navigate to the next setting and follow the same routine as above.

- Once you are happy with your set on/off times, touch  to save.


- 6. To return to the menu touch  and to return to the home screen touch .

When your BIBO bar goes into Standby Mode, it will display the following screen:



If you'd like to wake your BIBO bar up from Standby Mode before the scheduled time, press any button. The screen will then display the following:



Touch  to confirm you'd like to wake your BIBO bar up.



Using your BIBO bar


MENU OPTIONS AND PERSONAL SETTING


SAFETY SETTINGS

The BIBO bar dispenses boiling water. Accordingly it is necessary to take precautions when dispensing boiling hot water. While your BIBO bar has an inherent safety feature for boiling hot water dispensing, it is recommended that for children, the child lock setting be further enabled. While the child lock setting ensures further safety measures, children should always be supervised around the BIBO bar.

To enter the child lock setting:

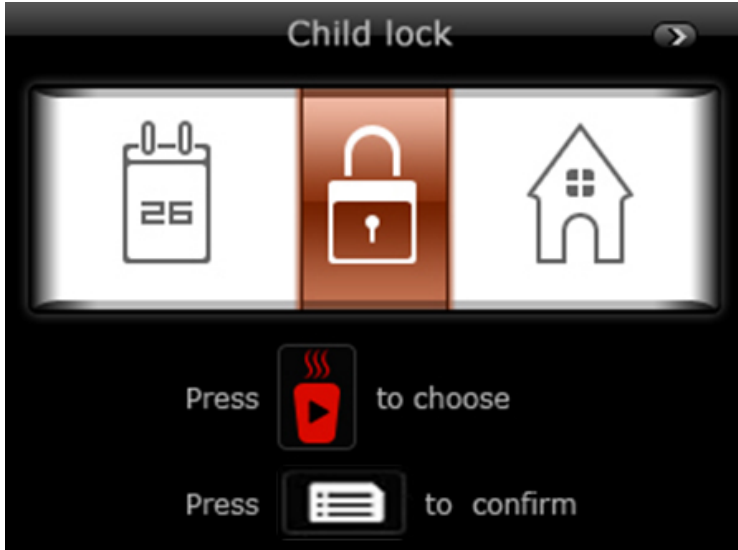


- 1. Touch  on your BIBO bar’s screen.
- 2. Navigate to the child lock setting by touching  four times. You will then see the child lock setting selected (Image i).





- 3. Touch  again to select and enter into the child lock settings. You will see an on and off child lock option (Image ii).



- 4. Navigate to your preferred option using  .

- 5. Once your preferred child lock mode has been selected, touch  to save the setting.
- 6. To return to the menu touch  and to return to the home screen touch  again.

Once the child lock setting has been enabled, you will only be able to dispense boiling hot water by first touching  and then holding  for 3 seconds.



Using your BIBO bar

MENU OPTIONS AND PERSONAL SETTING




RING SETTING

Your BIBO bar gives you the option for it to beep every time a button is touched or to rather operate in silent mode. As a default setting your BIBO's sound feedback is turned off.



To adjust the ring setting:

- 1. Touch  on your BIBO bar's screen.
- 2. Navigate to the ring setting by touching  seven times. You will then see the ring setting selected (Image i).



- 3. Touch  again to select and enter into the ring settings. You will see an on and off option.
- 4. Navigate to your preferred ring setting using .
- 5. Once your preferred ring setting has been selected, touch  to save the setting (Image ii).






- 6. To return to the menu touch  and to return to the home screen touch  again.


RESTORE FACTORY SETTING


The option to restore your BIBO bar to its factory settings, should only be done upon the advice and guidance of our BIBO technical team. Please do not select the restore option without speaking to us first.


To enter into the restore setting:

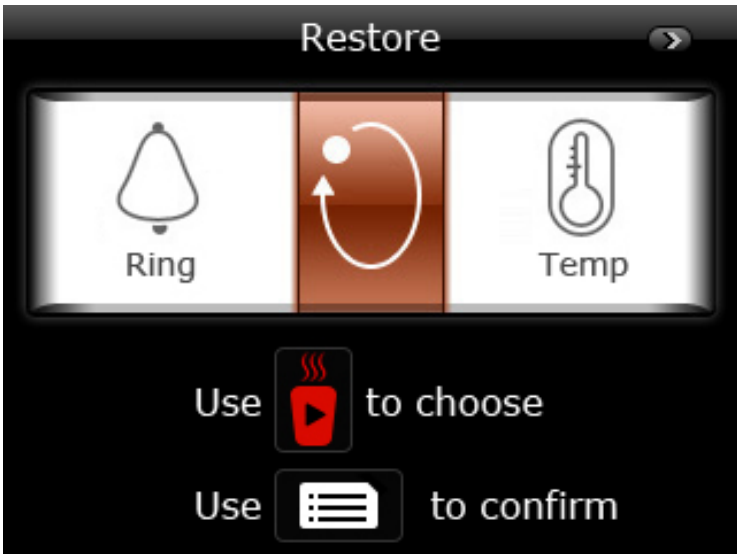


- 1. Touch  on your BIBO bar's screen.
- 2. Navigate to the restore setting by touching  eight times. You will then see the restore setting selected (Image iii).

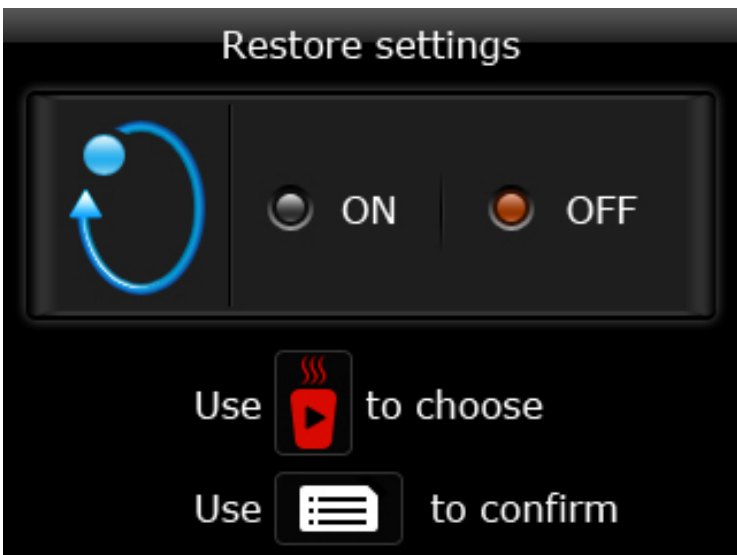

- 3. Touch  again to select and enter into the restore settings. You will see an on and off option (Image iv).



- 4. Navigate to your preferred restore option using .




- 5. Once your preferred restore option has been selected, touch  to save the setting.
- 6. To return to the menu touch  and to return to the home screen touch  again.

Using your BIBO bar

DISPENSING WATER

DISPENSING BOILING WATER

1. Place your mug, thermal cup or pot under the water outlet.


2. Unlock the boiling hot water flow by touching  followed by . If you have activated the child lock feature you will need to hold  down for 3 seconds.


3. Boiling hot water will then begin to dispense.

4. Once your vessel has filled, touch any button to stop the water flow (Image i).



i

5. If you would like to boost the boiling water temperature, touch . The screen will then display a boiling bar (Image ii).

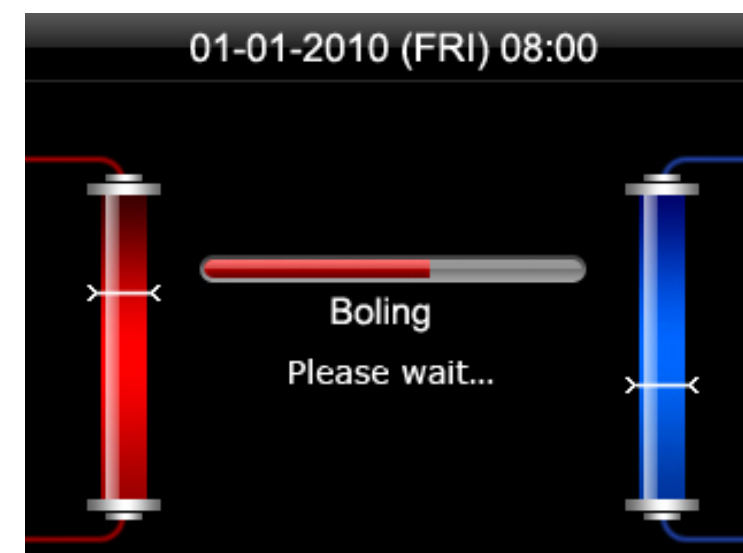

ii

6. Once boost has completed, you can dispense the boiling water as per the above instructions.

DISPENSING CHILLED WATER

1. Place your cup or bottle under the water outlet.

2. Touch  to start dispensing chilled water.

3. Once your vessel has filled, touch any button to stop the water flow (Image iii).




iii

DISPENSING AMBIENT/MIXED WATER

To use this feature, you will need to ensure the correct settings are saved, according to the instructions on [page 14](#).

1. Place your cup, mug or bottle under the water outlet.

2. Touch  to start dispensing water (Image iv).



iv

3. Your BIBO bar will first dispense a measured amount of cold water, followed by a

measured amount of boiling water (take caution).

4. Once your vessel has filled according to the amount set in the menu preferences, the water flow will stop automatically. To stop the water flow at any point before, touch any button on the screen.

NOTE: A ratio of hot and cold water will be dispensed. If the water flow is manually stopped before completed, the temperature of the dispensed water will be impacted.




Using your BIBO bar


DISPENSING WATER

DISPENSING A MEASURED CUP OF BOILING OR CHILLED WATER

To use this feature, you will need to ensure the correct settings are saved, according to the instructions on [page 13](#).

1. Place your cup, mug or bottle under the water outlet.

2. Touch  followed by either  or  to start dispensing your preferred water (Image i).

NOTE for dispensing boiling water: If you have activated the child lock feature, you will need to hold  down for 3 seconds.



i



ii



iii

3. Once your vessel has filled according to the amount set in the menu preferences, the water flow will stop automatically. To stop the water flow at any point before, touch any button on the screen.



Maintaining your BIBO bar



FILTER AND ZAPPER REPLACEMENT


Maintaining your BIBO bar is necessary to ensure its optimum operation and that all the 'bad guys' are removed efficiently from your drinking water. Maintenance is simple and involves the replacement of the BIBO maxi filter every 6 months and the replacement of the BIBO zapper once a year.



Although your BIBO bar will alert you when your BIBO maxi filter and BIBO zapper require replacement, the simplest way to stay on top of your filter requirements is by signing up to our filters@home debit order.


By signing up to the filters@home package, we will track, over the lifetime of your BIBO bar, exactly when your BIBO bar requires filter replacements - sending you your filters on time and to your door before you know it. Simple as that! If you'd like to find out more about our filters@home package, please get in touch on hello@bibo.co.za or [0800 00 BIBO](tel:080000BIBO) (2426).

To see how many days are left on your filters, enter the filter settings as follows:

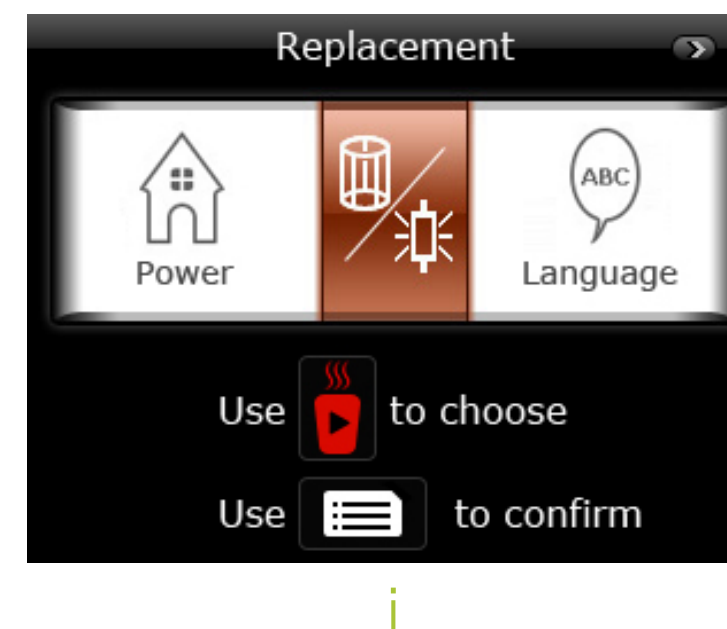
1. Touch  on your BIBO bar's screen.
2. Navigate to the filter settings by touching  five times (Image i).




3. Touch  to select and enter into the filter settings. You will see the maxi filter and zapper options.
4. Navigate to your preferred option using , either entering into your maxi filter or BIBO zapper settings (Image ii and iii).

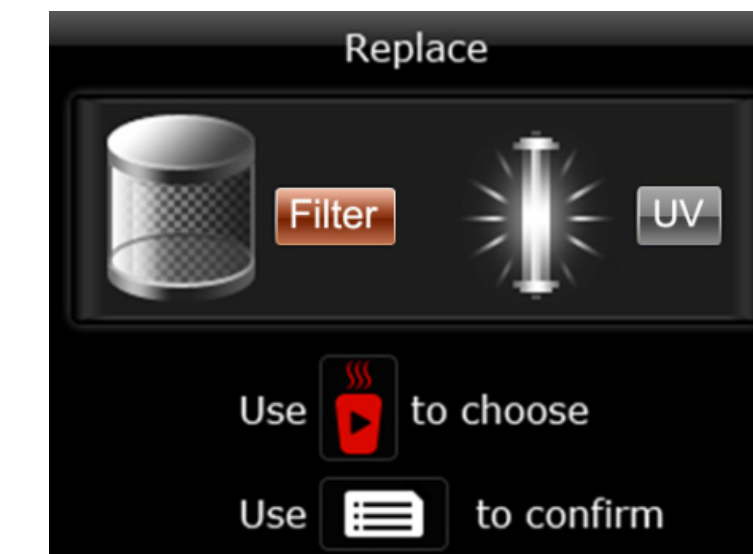


ii

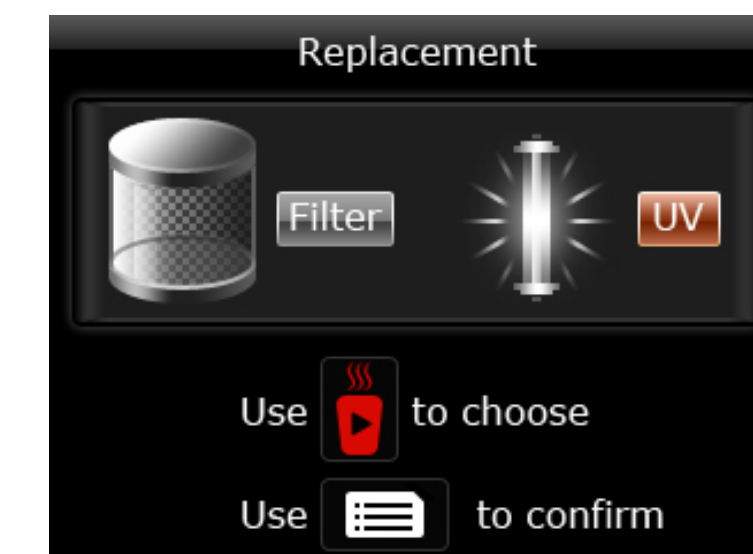

iii

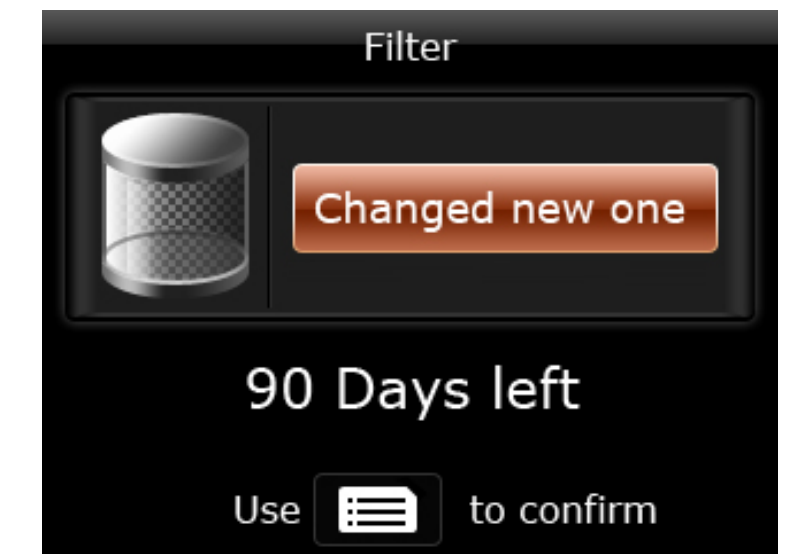

5. Touch  to enter into your preferred settings. You will then see how many days are left on either your BIBO maxi filter or BIBO zapper depending on which option you selected (Images iv and v).



iv



v


6. To return to the menu touch  and repeat the instructions above to enter into the other filter/replacement setting or to return to the home screen touch  again.

Maintaining your BIBO bar

FILTER AND ZAPPER REPLACEMENT

REPLACING YOUR BIBO MAXI FILTER

Your BIBO bar will alert you when your BIBO maxi filter needs to be replaced by first displaying a countdown to the expiration day and then with a replace filter message (Image i) once the expiration date has come.

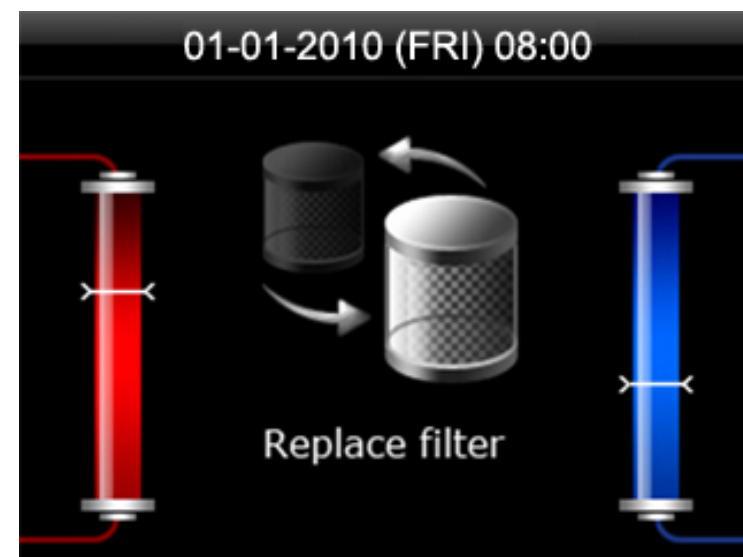


i

Changing the BIBO maxi filter is simple and involves the following:

1. Remove the lid on the top of your BIBO bar by simply lifting it off. You will see the tops of two


white filters on the right hand side of your BIBO bar.

The maxi filter is the one towards the back of your BIBO bar and can be recognised by its wider shape and a protruding handle from the top (Image ii).

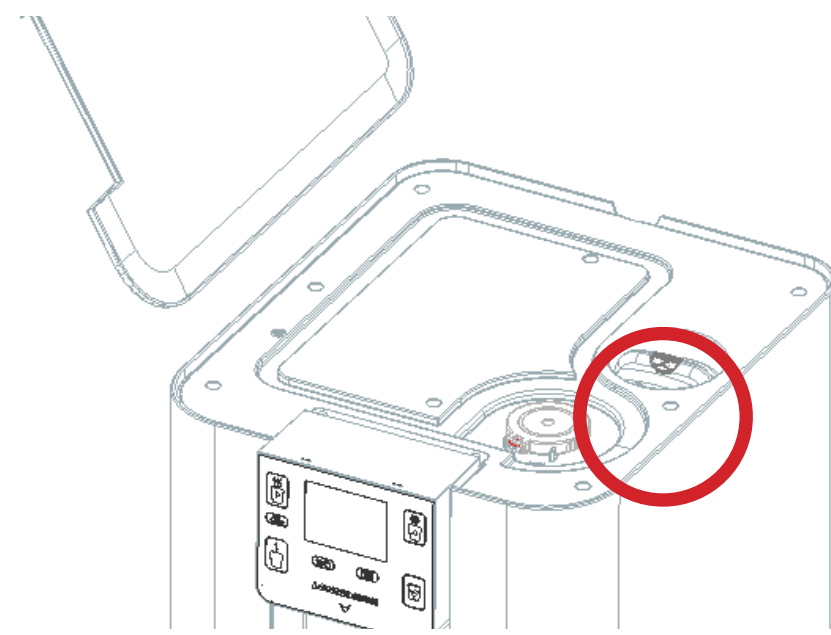

ii

to unlock the used maxi filter (Image iii). You can either do this by hand or using the white grip tool supplied with your filter pack (Image iv).

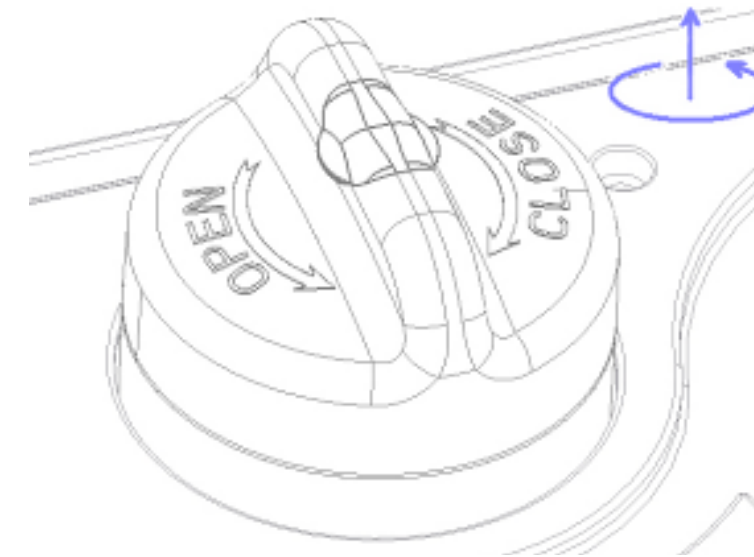

iii




iv

3. Pull the filter upwards and out.


4. Remove your new BIBO maxi filter from it's packaging and insert it.


5. Turn the new maxi filter clockwise to lock and install the new filter.


6. Replace the lid of your BIBO bar.


7. Once the filter has been replaced, touch  on your BIBO bar's screen.



8. Navigate to the filter setting by touching  five times.

9. Touch  to select and enter into the filter settings. You will then see the maxi filter and zapper options.

10. Navigate to your preferred option using . In this instance the maxi filter options should already be selected.

11. Touch  to enter into the maxi filter settings. You will then see how many days are left on your BIBO maxi filter along with the option to change the current maxi filter.

12. To activate and reset your filter counter touch  again. You will then see the counter updated to 180 days left on your BIBO maxi filter.


13. To return to the menu touch  and to return to the home screen touch  again.

Maintaining your BIBO bar

FILTER AND ZAPPER REPLACEMENT

REPLACING YOUR BIBO ZAPPER


Your BIBO bar will alert you when your BIBO zapper needs to be replaced, by first displaying a countdown to the expiration day and then with a replace zapper message (Image i) once the expiration date has come.

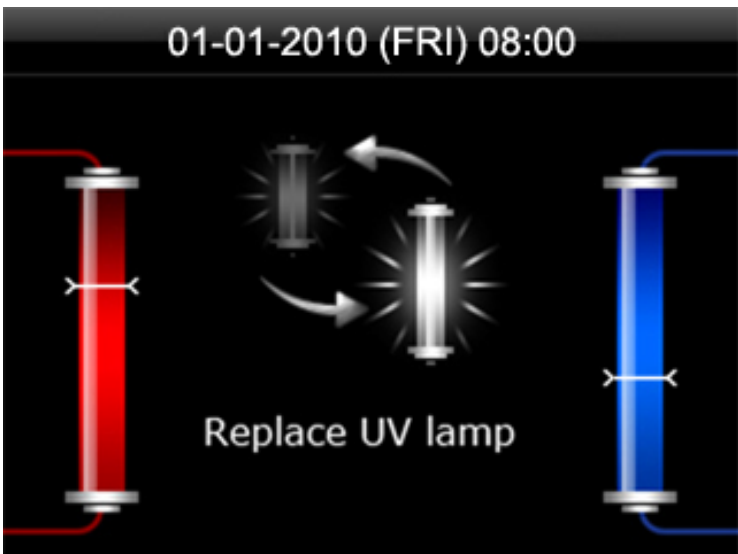

Changing the BIBO zapper is simple and involves the following:

1. Remove the lid on the top of your BIBO bar by simply lifting it off. You will see the tops of two white filters on the right hand side of your BIBO bar. The BIBO zapper is the one towards the

front of your BIBO bar and can be recognised by its slimmer shape and flat top (Image ii).

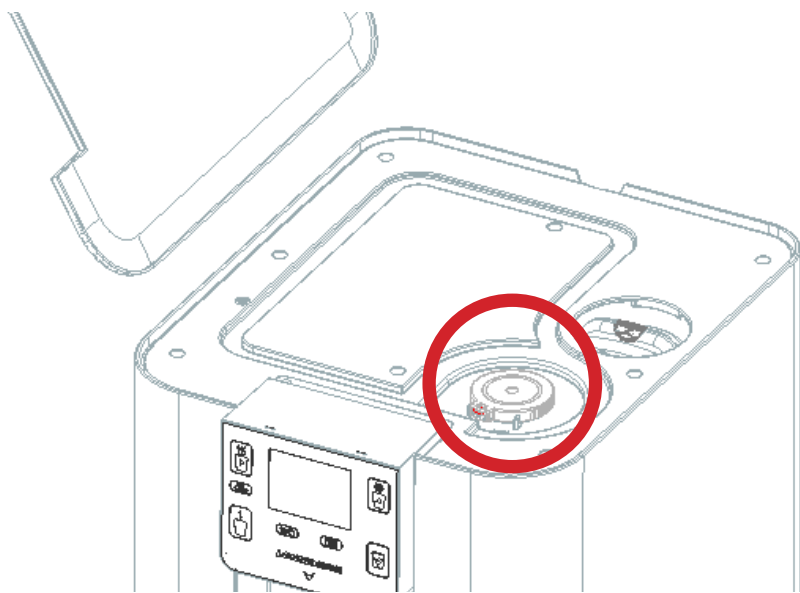


2. To release the BIBO zapper, you will need the key supplied with the delivery and/or installation of your BIBO bar (Image iii).



If you cannot locate it, do not worry! You should find a key in your filter replacement box.

Alternatively use anything small to release the latch as indicated below.


3. Put the key into the red slot on the top of the BIBO zapper (Image iv).

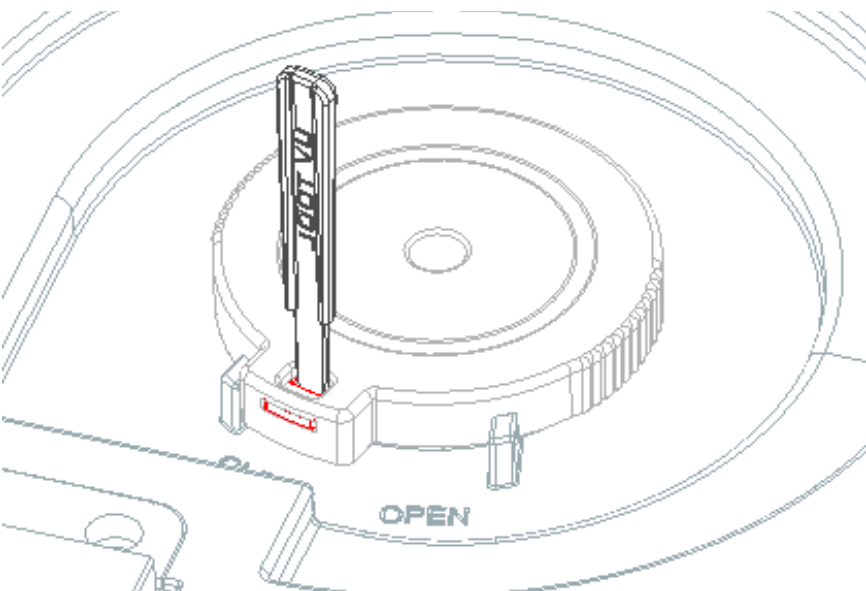

4. Push the key down to release the latch.

5. Turn the BIBO zapper anti-clockwise to "open".


6. Pull the BIBO zapper upwards and out (Image v).

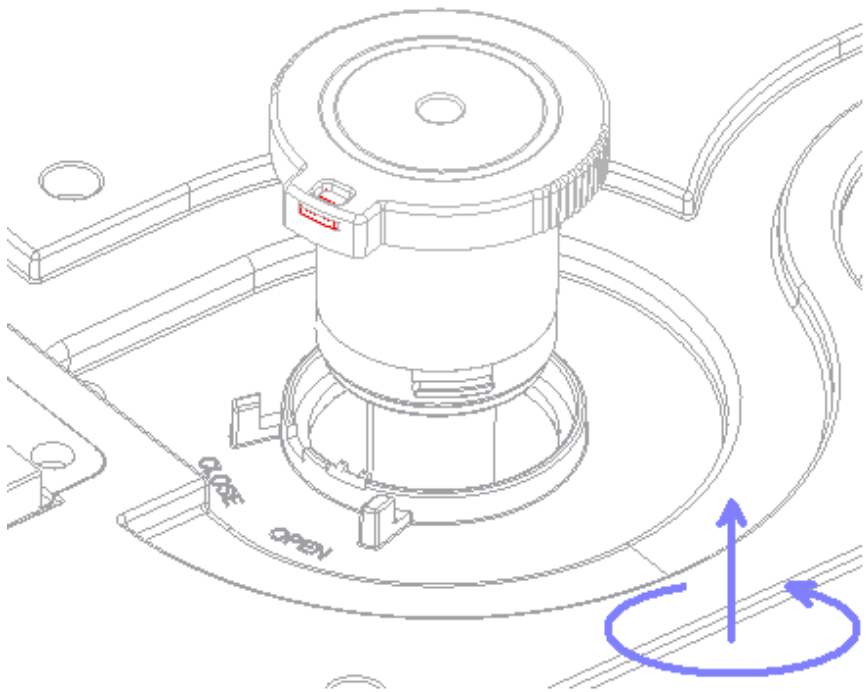


7. Remove your new BIBO zapper from its packaging (please handle it with care as it is delicate) and insert it into the top of your BIBO bar.

8. Push down so the red tongue is out and then twist.

9. Turn the new BIBO zapper clockwise to "close" and install the new zapper (Image vi).

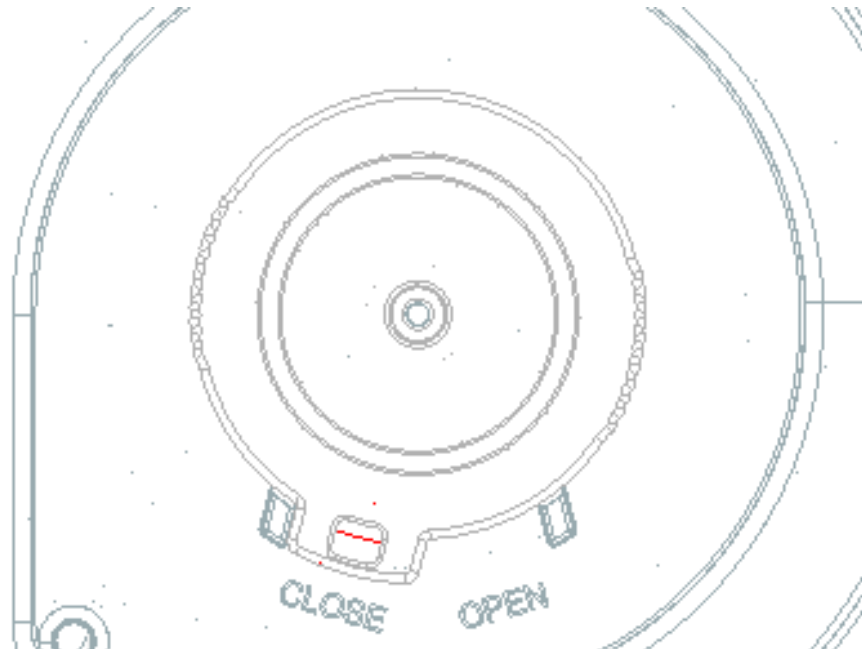

10. Replace the lid of your BIBO bar.





11. Once the BIBO zapper has been replaced, touch  on your BIBO bar's screen.




12. Navigate to the filter setting by touching  five times.

Maintaining your BIBO bar

FILTER AND ZAPPER REPLACEMENT

REPLACING YOUR BIBO ZAPPER

- 13.** Touch  to select and enter into the filter settings. You will then see the maxi filter and zapper options.
- 14.** Navigate to your preferred option using . In this instance touch  once to select the BIBO zapper option.
- 15.** Touch  to enter into the BIBO zapper settings. You will then see how many days are left on your BIBO zapper filter along with the option to change the current BIBO zapper.

- 16.** To activate and reset the BIBO zapper counter touch . The days remaining will change from 0 to 360 days left.
- 17.** To return to the menu touch  and to return to the home screen touch  again.



CLEANING YOUR BIBO bar

- The BIBO bar is connected to an electrical supply. Please take caution to not wet the back of the BIBO bar whilst cleaning it.
- To keep your BIBO bar looking sparkly and fresh, clean it by simply wiping it down with a damp cloth. If you wish, you are also able to use mild soap or any other gentle detergent.
- Please don't use harsh detergents, concentrated washing liquids or solvents to clean your BIBO bar.
- Additionally, please avoid anything abrasive (such as steel brushes, scourers and the like) to clean the body of your BIBO bar as it will scratch.
- The BIBO bar drip tray can be removed and cleaned by hand or in your dishwasher.

Technical Information

PRODUCT SPECIFICATIONS

There’s a lots that goes on inside your BIBO bar. If you’re looking for the technical ins and outs, please find the BIBO bar specifications below:

SPECIFICATION	PARAMETER
<u>Electrical specification</u>	
Voltage	230 Volts
Frequency	50 Hertz
Power rating	1 700 Watts
Current rating	10 Amps
<u>Heating system</u>	
Power rating	1 500 Watts
Heating capacity	15 Litres/hour*
Hot water temperature	70-98°C (adjustable)
<u>Chilling system</u>	
Power rating	138 Watts
Cooling capacity	5 Litres/hour*
Cold water temperature	4-16°C (adjustable)
<u>Filtration system</u>	
Activated carbon filter	0.5 Micron
BIBO Zapper	11 Watts
<u>Inlet water pressure</u>	
Minimum-Maximum	0.1MPa-0.6MPa
Dimensions (mm)	300W x 370D x 340H
Weight	15.5kg
Operating standards	GB4706.1-2005 GB4706.13-2008 GB4706.19-2008 GB/T22090-200

*The dispense capacity is calculated at an ambient and inlet water temperature of +25°C.
The maximum ambient working temperature is +38°C.



Safety Notes

Please remember that this new member of your home/office is an electrical appliance. Accordingly, to keep both you and your BIBO bar working together in harmony, some safety stuff need to be followed. **Please remember:**

Your BIBO bar is for indoor use only.

Avoid placing your BIBO bar in direct sunlight or next to flammable materials.

Avoid placing your BIBO bar near other appliances that could get damaged if wet.

Do not immerse your BIBO bar in water.

Your BIBO bar uses 230VAC voltage and should be used with a 3-pin plug.

Warning: the BIBO bar must be used with a reliable earth in the mains power supply socket.

Ensure that your water feed/supply is flushed out thoroughly into a bucket until clear water is visible with no sediments or dirt particles in the water. This is to ensure your BIBO bar does not block up. Be sure to do so especially on newly renovated homes and offices.

Ensure that your water feed/supply is a cold water feed only.

It is important that, when using a new or freshly cleaned BIBO bar for the first time, the water is flowing freely through both the hot and cold water outlets before switching the hot water tank on.

When your BIBO bar is turned on for the first time, we recommend running 1-1,5 litres of water through it before drinking the water. This makes sure that the water is at its freshest.

Your BIBO bar can produce high temperature boiling water. As with any kettle, pan or appliance capable of producing boiling water, please exercise caution.

Your BIBO bar's hot tank is directly connected to the hot water outlet with no valves between the tank and the hot water outlet. This is to prevent the valves from being damaged by the boiling water. As such, it is normal for a small amount of excess water to be released after the boiling water has been dispensed. Please take caution.

If you're looking for a little more technical information or explanations regarding your trusty BIBO bar, please don't hesitate to get in touch with us via email at help@bibo.co.za.

Troubleshooting

In the unlikely event that you find yourself in a bit of a pickle with your BIBO bar, please refer to the troubleshooting guide below to determine the possible fault types and suggested steps to get your BIBO bar up and running again.

FAULTY TYPE	POSSIBLE CAUSE	SOLUTION
No water flow	<ul style="list-style-type: none">1. Machine power is not connected2. Power socket failure3. ½” T connector closed4. Main line blockage or water has been shut off5. Low water pressure	<ul style="list-style-type: none">1. Unplug your BIBO bar and then plug it back in again. Check the switch is on2. Check the socket and fuse3. Check the water inlet valve is open4. Check your water supply system5. Check your water supply system
No hot water	<ul style="list-style-type: none">1. Heating system is not turned on2. Hot water temperature set too low3. Excessive hot water use4. Your BIBO bar has entered into power saving mode5. Hot tank disabled, after an extended period of non use	<ul style="list-style-type: none">1. Turn on the hot tank switch at the back of your BIBO bar (remember to make sure that water is flowing freely from the hot water outlet before switching it on)2. Check the water temperature settings3. Look at red bar guide on screen4. Wake your BIBO bar up by following the prompts5. Call us on 0800 00 BIBO (2426). Your hot tank will need to be reset. <p>p.s. Please remember to switch off and unplug your BIBO bar if you are going away or it will be left unused for an extended period of time to avoid this from happening</p>
No cold water	<ul style="list-style-type: none">1. Chilled water temperature is set too high2. Excessive cold water use3. Ice build up in the cold water tank, after an extended period of non use	<ul style="list-style-type: none">1. Check the water temperature settings2. Look at blue bar guide on screen3. Turn off the power and wait 2 hours before turning it back on. If it happens again, call us! <p>p.s. Please remember to switch off and unplug your BIBO bar if you are going away or it will be left unused for an extended period of time to avoid this happening</p>
Leakage	<ul style="list-style-type: none">1. Drip tray is full2. A leak inside your BIBO bar	<ul style="list-style-type: none">1. Empty the water from the drip tray and dry thoroughly before replacing2. Turn off power and water and please contact us on 0800 00 BIBO (2426) straight away
Odour from water	<ul style="list-style-type: none">1. New BIBO bar2. A long period of non use3. Filter replacements have not taken place when required	<ul style="list-style-type: none">1. Drain 10-15 litres of water through your BIBO bar2. Replace your BIBO maxi filter3. Replace the expired filters

If you’re still a little stuck and find that your BIBO bar is still not operating as it should, or if a problem persists, please contact us via email at hello@bibo.co.za or call us on [0800 00 BIBO](tel:080000BIBO) (2426). Your BIBO bar may require some professional TLC.

Warranty

Your BIBO bar comes with a free one year warranty, which means that in the unlikely event that there is any problem or fault, which our team cannot repair on site, we will replace your BIBO bar with a new one for free while your warranty is valid. Appropriate maintenance costs will be charged for any damage that is caused by the misuse of your BIBO bar or incurred once your warranty has expired. You can extend your 1 year warranty for another year on www.bibo.co.za.

Please remember that if you experience any problems with your BIBO bar, do not attempt to disassemble your BIBO bar by yourself, this will invalidate your product warranty. BIBO will take no responsibility for any resulting issues. So rather keep it simple and contact us directly via email at help@BIBO.co.za or call us on **0800 00 BIBO (2426)** - let us do all the work!



Please remember to let us know how you're enjoying your BIBO bar by emailing us at hello@bibo.co.za with your feedback or reviewing us on Facebook [here](#).

Wishing you many happy, healthy and hydrating hours with your BIBO bar.

Cheers!

